



PU CLEAR SEALER ITALIAN WOOD FINISHES

Wood Amore PU Clear Sealer is having excellent coverage and high transparency. It protects wood by retaining its original grains by creating a transparent PU film over the wood

PRODUCT BENEFITS/FEATURES



Sandability and Flowing



Fast drying



Super filling capacity



Good transparency




Interior

AREAS OF APPLICATION

- Natural wood • Various Veneer • Furniture and fittings
- Baseboards and shaped parts

PACKAGING AVAILABLE

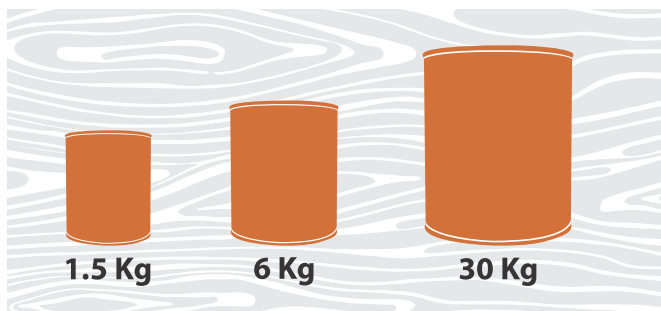

COVERAGE

On normal masonry surface by brushing




*Actual Coverage may vary from the quoted coverage due to factors such as method and condition of application, surface roughness and porosity.

FINISH

✓ SMOOTH

COLOURS AVAILABLE

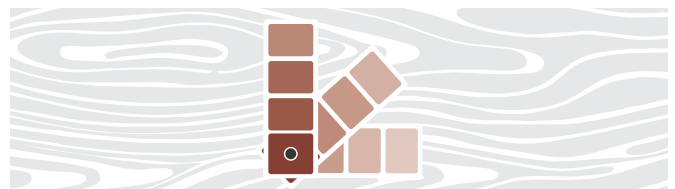

Range of 7 attractive translucent Wood Amore Wood stains for interiors available to add/change colors.

HOW TO APPLY

Pre-painting steps

SANDING: Sand the wooden surface along the grains using sand paper no. 180, and then 320 or 400. Wipe surface to clean off loose dust particles.

Insulating: Apply 1-2 coats of Wood Amore PU Insulator to insulate from oil & resin from the wood, also it reduces absorption of a paint material on Plywood & MDF.

Dent Filling: If the surface has dents, apply Dent Filler with a putty knife over the dented area.

Stain Application: Apply Wood Amore wood stain as per required selected shade.

APPLICATION:

STEP 1: Apply first coat of Wood Amore PU Clear Sealer.

STEP 2: Sanding: Sand with sand paper no. 320 or 400 and wipe clean (after drying)

STEP 3: Apply second coat of Wood Amore PU Clear Sealer.

STEP 4: Sand with sand paper no. 320 or 400 and wipe clean (Apply third coat if required before top coat application, sand with sand paper no. 320/400 and wipe clean)

STEP 5: Apply first coat of Wood Amore PU clear matt 20%/50%/ clear gloss.

STEP 6: Sanding: Sand the surface with emery paper 320 or 400 and wipe clean

STEP 7: Apply second coat of Wood Amore PU clear matt 20%/50%/ clear gloss

POST PAINTING CARE

For removing stains on tiles and metal surfaces, apply NC Thinner on the surface and wipe clean. If stains are difficult to remove, scrapping can be done after applying NC thinner on the stained area. Precautions need to be taken while spraying / brushing, like masking of adjoining areas with suitable material, as the stains may be difficult to remove if present on wood or coated wooden and wall surfaces.

TECHNICAL DETAILS

a. Drying time : Surface dry time 30 min.

b. Sheen levels: 20- 40 at 60 deg GH

c. Flash point IS10111987 Part 1, Sec 6: -9C (15.8 F)

d. Stability of thinned paint: 3-4 Hr

Mixing ratio- 2:1 by volume (Resin + Hardener)

Thinner- Wood Amore PU Medium thinner.

Thinner Intake- 30- 35% by Volume.

Number of coats- 2- 3 coats

Dust free time- 40-50 min

Sanding time- 3.5- 4 Hr.

Gun Nozzle- 1.6- 1.8mm

Gun pressure- 2.2- 2.8 Kgs/sq.cm

Weather- 30°C and 75% relative humidity

PRECAUTIONS

For optimum performance of Wood Amore PU Clear Sealer

1. Wood Amore PU top coats must be applied at a temperature between 20°C and 40°C and humidity not above 75%.
2. Do not over-thin and mix according to recommended ratios
3. Stir well and strain before use.

SAFETY FEATURES

- Kindly refer to the MSDS of Wood Amore PU Clear Sealer, Gloss and Matt, which gives detailed information on safety measures while handling the paint.
- Store the product at ambient conditions in well ventilated locations and away from source of ignition and fire.
- Use protective equipment like rubber/polyurethane gloves, safety goggles/glasses, face mask while handling the paint.
- Avoid eye and skin contact. In both cases wash with soap and plenty of water. Get medical attention if irritation develops or persists.
- Do not inhale or ingest. In case of inhalation move to fresh air and seek medical attention if symptoms persist in both cases.
- Dispose in land filling. Do not dispose in any drain or landfill.
- No added Lead, Mercury or Chromium compounds.



PU WHITE FILLER ITALIAN WOOD FINISHES

Wood Amore PU White Filler is a high solid Polyurethane with suitability on wood, MDF & other wooden products for interior use. It offers good hiding power & filling power

PRODUCT BENEFITS/FEATURES



Excellent filling



Superior Coverage



Easy sanding



Fast drying




Interior

AREAS OF APPLICATION

• Various natural wood • MDF • HDF • Furniture and fittings

PACKAGING AVAILABLE

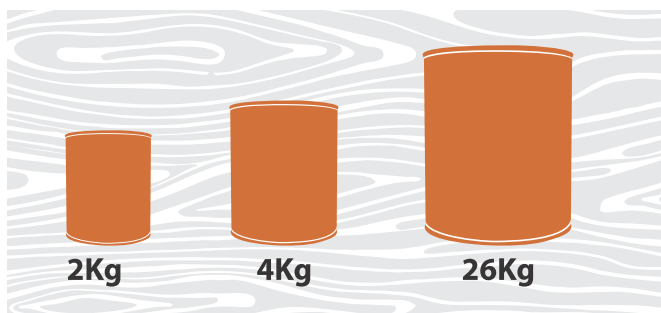

COVERAGE




*Actual Coverage may vary from the quoted coverage due to factors such as method and condition of application, surface roughness and porosity.

FINISH

✓ SMOOTH

✓ GLOSSY

COLOURS AVAILABLE

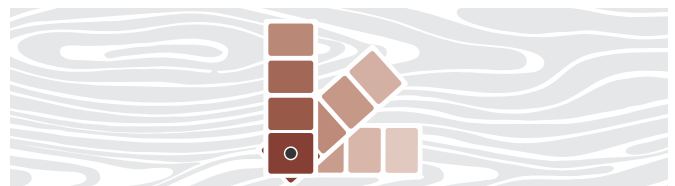

Range of 2000 RAL & NCS Shade for interiors available to add/change colours

HOW TO APPLY

Pre-painting steps

SANDING: Sand the wooden surface along the grains using sand paper no. 180, and then 320 or 400. Wipe surface to clean off loose dust particles.

INSULATING: Apply 1-2 coats of Wood Amore PU Insulator to insulate from oil & resin from the wood, also it reduces absorption of a paint material on Plywood & MDF.

DENT FILLING: If the surface has dents, apply Dent Filler with a putty knife over the dented area.

APPLICATION:

STEP 1: Apply first coat of Wood Amore PU White Filler

STEP 2: SANDING: Sand with sand paper no. 320 or 400 and wipe clean (after drying)

STEP 3: Apply second coat of Wood Amore PU White Filler

STEP 4: Sand with sand paper no. 320 or 400 and wipe clean (Apply third coat if required before top coat application, sand with sand paper no. 320/400 and wipe clean)

STEP 5: Apply first coat of Wood Amore PU White Matt 10% / White Gloss

STEP 6: Sanding: Sand the surface with emery paper 320 or 400 and wipe clean

STEP 7: Apply second coat of Wood Amore PU White Matt 10% / White Gloss

POST PAINTING CARE

For removing stains on tiles and metal surfaces, apply NC Thinner to the surface and wipe clean. If stains are difficult to remove, scraping can be done after applying NC thinner to the stained area. Precautions need to be taken while spraying or brushing, like masking adjoining areas with suitable material, as the stains may be difficult to remove if present on wood or coated wooden and wall surfaces.

TECHNICAL DETAILS

a. Drying time : Surface dry time 30 min.

b. Flash point IS10111987 Part 1, Sec 6:-9C (15.8 F)

c. Stability of thinned paint: 3- 4 Hr

Mixing ratio- 2:1 by volume (Resin + Hardener)

Thinner- Wood Amore PU Medium thinner.

Thinner Intake- 30- 35% by Volume.

Number of coats- 2- 3 coats

Dust free time- 40-50 min

Handling time- 3.5- 4 Hr.

Gun Nozzle- 1.6-1.8mm

Gun pressure- 2.2- 2.8 Kgs/sq.cm

Weather- 30°C and 75% relative humidity

PRECAUTIONS

For optimum performance of Wood Amore PU White Filler

1. Wood Amore PU top coats must be applied at a temperature between 20°C and 40°C and humidity not above 75%.
2. Do not over-thin and mix according to recommended ratios
3. Stir well and strain before use.

SAFETY FEATURES

- Kindly refer to the MSDS of Wood Amore PU White Filler, Gloss and Matt. Matt, which gives detailed information on safety measures while handling the paint.
- Store the product at ambient conditions in well ventilated locations and away from source of ignition and fire.
- Use protective equipment like rubber/polyurethane gloves, safety goggles/glasses, face mask while handling the paint.
- Avoid eye and skin contact. In both cases wash with soap and plenty of water. Get medical attention if irritation develops or persists.
- Do not inhale or ingest. In case of inhalation move to fresh air and seek medical attention if symptoms persist in both cases.
- Dispose in land filling. Do not dispose in any drain or landfill.
- No added Lead, Mercury or Chromium compounds



PU CLEAR GLOSS ITALIAN WOOD FINISHES

Wood Amore PU Clear Gloss is a premium polyurethane with high durability for wood and veneer. It offers excellent durability, stain and chemical resistance for protection of wood in interior applications

PRODUCT BENEFITS/FEATURES



Rich Finish



Superior Softness & Surface hardness



Excellent flow



Absence of sinking




Interior


AREAS OF APPLICATION

- Various veneer • For furniture and fittings • Solid wood
- Natural wood

PACKAGING AVAILABLE

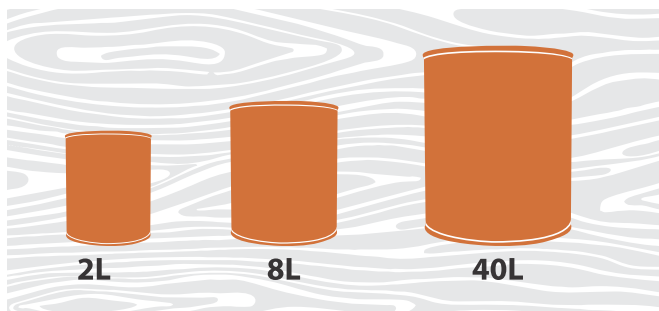

COVERAGE

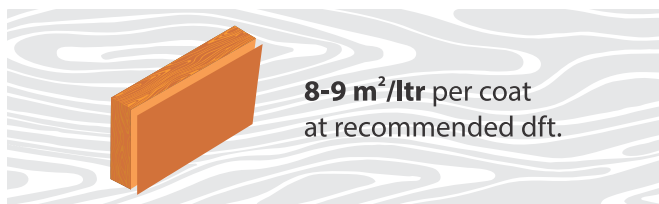


*Actual Coverage may vary from the quoted coverage due to factors such as method and condition of application, surface roughness and porosity.

FINISH

✓ SMOOTH

✓ GLOSSY

COLOURS AVAILABLE

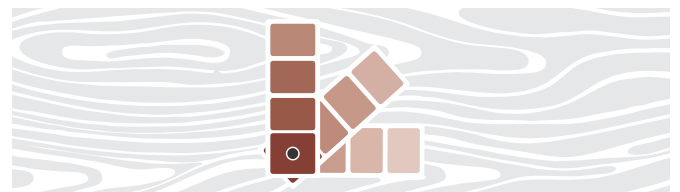

Range of 7 attractive translucent Wood Amore Wood stains for interiors available to add/change colors

HOW TO APPLY

Pre painting steps

SANDING: Sand the wooden surface along the grains using sand paper no. 180, and then 320 or 400. Wipe surface to clean off loose dust particles.

INSULATING: Apply 1-2 coats of Wood Amore PU Insulator to insulate from oil & resin from the wood, also it reduces absorption of a paint material on Plywood & MDF.

DENT FILLING: If the surface has dents, apply Dent Filler with a putty knife over the dented area.

STAIN APPLICATION: Apply Wood Amore Wood stain as per required selected shade.

APPLICATION:

STEP 1: Apply first coat of Wood Amore PU Clear Sealer

STEP 2: SANDING: Sand with sand paper no. 320 or 400 and wipe clean (after drying)

STEP 3: Apply second coat of Wood Amore PU Clear Sealer

STEP 4: Sand with sand paper no. 320 or 400 and wipe clean (Apply third coat if required before top coat application, sand with sand paper no. 320/400 and wipe clean)

STEP 5: Apply first coat of Wood Amore PU Clear Gloss

STEP 6: SANDING: Sand the surface with emery paper 320 or 400 and wipe clean

STEP 7: Apply second coat of Wood Amore PU Clear Gloss (Apply third coat if required after sanding with sand paper no. 320/400 and wipe clean)

POST PAINTING CARE

For removing stains on tiles and metal surfaces, apply NC Thinner on the surface and wipe clean. If stains are difficult to remove, scrapping can be done after applying NC thinner on the stained area. Precautions need to be taken while spraying / brushing, like masking of adjoining areas with suitable material, as the stains may be difficult to remove if present on wood or coated wooden and wall surfaces.

TECHNICAL DETAILS

a. Drying time : Surface dry time 50 min.

b. Flash point IS10111987 Part 1, Sec 6: 9C (15.8 F)

c. Stability of thinned paint- 3-4 Hr Gloss- 90+

Mixing ratio- 1:1 by volume (Resin + Hardener)

Thinner- Wood Amore PU Glossy thinner.

Thinner Intake- 30- 35% by Volume.

Number of coats- 2- 3 coats

Dust free time- 40-50 min

Tack free time- 3.5- 4 Hr.

Gun Nozzle- 1.4mm

Gun pressure- 2.2- 2.8 kgs/sq.cm

Weather- 30°C and 75% relative humidity

PRECAUTIONS

For optimum performance of Wood Amore PU Clear Gloss

1. Wood Amore PU top coats must be applied at a temperature between 20°C and 40°C and humidity not above 75%.
2. Do not over-thin and mix according to recommended ratios
3. Stir well and strain before use.

SAFETY FEATURES

- Kindly refer to the MSDS of Wood Amore PU Clear Sealer, Gloss and Matt which gives detailed information on safety measures while handling the paint.
- Store the product at ambient conditions in well ventilated locations and away from source of ignition and fire.
- Use protective equipment like rubber/polyurethane gloves, safety goggles/glasses, face mask while handling the paint.
- Avoid eye and skin contact. In both cases wash with soap and plenty of water. Get medical attention if irritation develops or persists.
- Do not inhale or ingest. In case of inhalation move to fresh air and seek medical attention if symptoms persist in both cases.
- Dispose in land filling. Do not dispose in any drain or landfill.
- No added Lead, Mercury or Chromium compounds



PU CLEAR MATT ITALIAN WOOD FINISHES

Wood Amore PU Clear Matt is a high durability product for protection of wood and veneer. It offers uniform matting and excellent transparency and smoothness

PRODUCT BENEFITS/FEATURES



Excellent Finish



Good Verticality



Long Lasting durability



Scratch resistance




Interior


AREAS OF APPLICATION

- Natural wood • Various Veneer • Hard wood
- Plywood

PACKAGING AVAILABLE

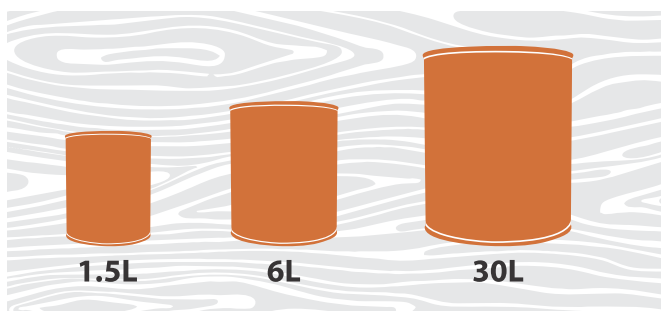

COVERAGE

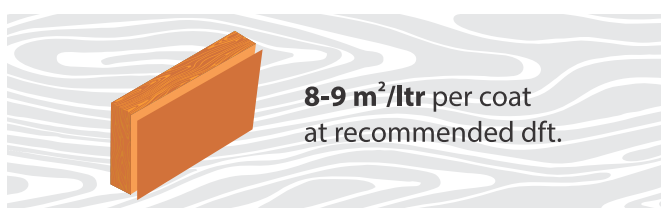


*Actual Coverage may vary from the quoted coverage due to factors such as method and condition of application, surface roughness and porosity.

FINISH

✓ SMOOTH

✓ MATT

COLOURS AVAILABLE

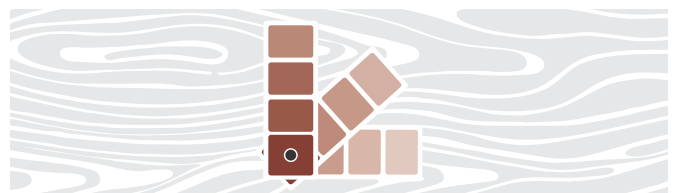

A Range of 7 attractive Translucent Wood Amore Wood Stains for Interiors available to add/change colour.

HOW TO APPLY

SANDING: Sand the wooden surface along the grains using sand paper no. 180, and then 320 or 400. Wipe surface to clean off loose dust particles.

INSULATING: Apply 1-2 coats of Wood Amore PU insulator to insulate from oil & resin from the wood, also it reduces absorption of a paint material on plywood & mdf.

DENT FILLING: If the surface has dents, apply dent filler with a putty knife over the dented area.

Stain Application: Apply Wood Amore Wood Stain as per required selected shade.

APPLICATION:

STEP 1: Apply first coat of Wood Amore PU Clear Sealer

STEP 2: SANDING: Sand with sand paper no. 320 or 400 and wipe clean (after drying)

STEP 3: Apply the second coat of Wood Amore PU Clear Sealer.

STEP 4: Sand with sand paper no. 320 or 400 and wipe clean (Apply third coat if required before top coat application, sand with sand paper no. 320/400 and wipe clean)

STEP 5: Apply first coat of Wood Amore PU Clear Matt 20% / PU Clear Matt 50%

STEP 6: SANDING: Sand the surface with emery paper 320 or 400 and wipe clean

STEP 7: Apply second coat of Wood Amore PU Clear Matt 20% / PU Clear Matt 50% (Apply third coat if required after sanding with sand paper no. 320/400 and wipe clean)

POST PAINTING CARE

For removing stains on tiles and metal surfaces, apply NC Thinner on the surface and wipe clean. If stains are difficult to remove, scrapping can be done after applying NC thinner on the stained area. Precautions need to be taken while spraying/brushing, like masking of adjoining areas with suitable material, as the stains may be difficult to remove if present on wood or coated wooden and wall surfaces.

TECHNICAL DETAILS

a. Drying time : Surface dry time 30 min.

b. Flash point IS10111987 Part 1, Sec 6: 9C (15.8 F)

c. Sheen levels: 18 - 22at 60° GH

d. Stability of thinned paint: To be used within 3-4 hours

Mixing ratio- 2:1 by volume (Resin + Hardener)

Thinner- Wood Amore PU Medium thinner.

Thinner Intake- 30- 35% by Volume.

Number of coats- 2- 3 coats

Dust free time- 30-40 min

Handling time- 3.5- 4 Hr.

Gun Nozzle- 1.4mm

Gun pressure- 2.2- 2.8 kgs/sq.cm

Weather- 30°C and 75% relative humidity

PRECAUTIONS

For optimum performance, Wood Amore PU Clear Matt

1. Wood Amore PU top coats must be applied at a temperature between 20°C and 40°C and humidity not above 75%.
2. Do not over-thin and mix according to recommended ratios
3. Stir well and strain before use.

SAFETY FEATURES

- Kindly refer to the MSDS of Wood Amore PU Clear Sealer, Gloss and Matt which gives detailed information on safety measures while handling the paint.
- Store the product at ambient conditions in well ventilated locations and away from source of ignition and fire.
- Use protective equipment like rubber/polyurethane gloves, safety goggles/glasses, face mask while handling the paint.
- Avoid eye and skin contact. In both cases wash with soap and plenty of water. Get medical attention if irritation develops or persists.
- Do not inhale or ingest. In case of inhalation move to fresh air and seek medical attention if symptoms persist in both cases.
- Dispose in land filling. Do not dispose in any drain or landfill.
- No added Lead, Mercury or Chromium compounds



PU WHITE MATT ITALIAN WOOD FINISHES

Wood Amore PU White Matt is a high quality matt topcoat which offers even matting on surface along with good hiding power.

PRODUCT BENEFITS/FEATURES



Excellent Finish



Excellent coverage



Good smoothness, Surface hardness and flowing.



Good verticality




Excellent whiteness


AREAS OF APPLICATION

• Wood • MDF • Frames, chairs and turned parts

PACKAGING AVAILABLE

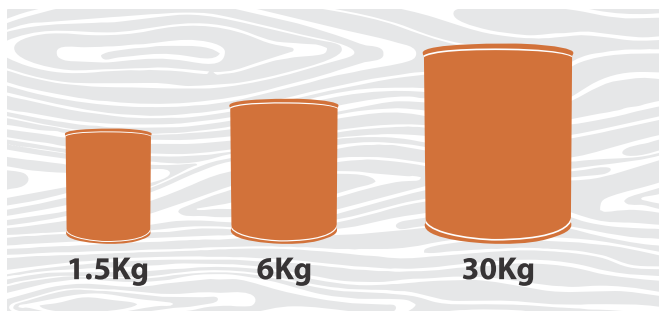

COVERAGE

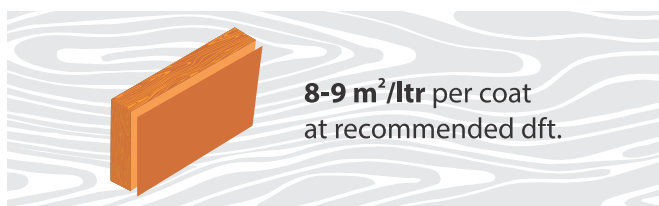


*Actual Coverage may vary from the quoted coverage due to factors such as method and condition of application, surface roughness and porosity.

FINISH

✓ SMOOTH

✓ MATT

COLOURS AVAILABLE

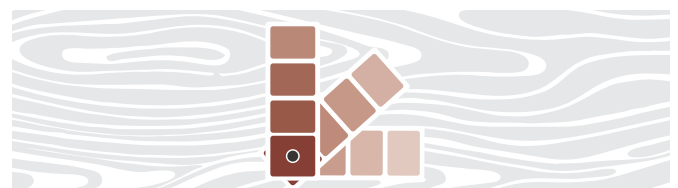

Range of 2000 RAL & NCS Shade for interiors available to add/change colours

HOW TO APPLY

SANDING: Sand the wooden surface along the grains using sand paper no. 180, and then 320 or 400. Wipe surface to clean off loose dust particles.

INSULATING: Apply 1-2 coats of Wood Amore PU Insulator to insulate from oil & resin from the wood, also it reduces absorption of a paint material on plywood & mdf.

DENT FILLING: If the surface has dents, apply dent filler with a putty knife over the dented area.

APPLICATION:

STEP 1: Apply first coat of Wood Amore PU white filler

STEP 2: SANDING: Sand with sand paper no. 320 or 400 and wipe clean (after drying)

STEP 3: Apply second coat of Wood Amore PU white matt 20%

STEP 4: Sand with sand paper no. 320 or 400 and wipe clean (apply third coat if required before top coat application, sand with sand paper no. 320/400 and wipe clean)

STEP 5: Apply first coat of Wood Amore PU white matt 10%/light shade

STEP 6: SANDING: Sand the surface with emery paper 320 or 400 and wipe clean

STEP 7: Apply second coat of Wood Amore PU white matt 10%/light shade

POST PAINTING CARE

For removing stains on tiles and metal surfaces, apply NC Thinner on the surface and wipe clean. If stains are difficult to remove, scrapping can be done after applying NC thinner on the stained area. Precautions need to be taken while spraying/brushing, like masking of adjoining areas with suitable material, as the stains may be difficult to remove if present on wood or coated wooden and wall surfaces.

TECHNICAL DETAILS

a. Drying time: Surface dry time 30min.

b. Flash point IS101/1987 Part 1, Sec 6: 9C (15.8 F)

c. Sheen levels: 10-12 at 60° GH

d. Stability of thinned paint: To be used within 3-4 hours

Mixing ratio- 2:1 by weight (Resin + Hardener)

Thinner- Wood Amore PU Medium thinner.

Thinner Intake- 30- 35% by Volume.

Number of coats- 2- 3 coats

Dust free time- 40-50 min

Handling time- 3.5- 4 Hr.

Gun Nozzle- 1.6-1.8mm

Gun pressure- 2.2- 2.8 kgs/sq.cm

Weather- 30°C and 75% relative humidity

PRECAUTIONS

For optimum performance of Wood Amore PU White Matt

1. Wood Amore PU top coats must be applied at a temperature between 20°C and 40°C and humidity not above 75%.
2. Do not over-thin and mix according to recommended ratios
3. Stir well and strain before use.

SAFETY FEATURES

- Kindly refer to the MSDS of Wood Amore PU White Filler, Gloss and Matt which gives detailed information on safety measures while handling the paint.
- Store the product at ambient conditions in well ventilated locations and away from source of ignition and fire.
- Use protective equipment like rubber/polyurethane gloves, safety goggles/glasses, face mask while handling the paint.
- Avoid eye and skin contact. In both cases wash with soap and plenty of water. Get medical attention if irritation develops or persists.
- Do not inhale or ingest. In case of inhalation move to fresh air and seek medical attention if symptoms persist in both cases.
- Dispose in land filling. Do not dispose in any drain or landfill.
- No added Lead, Mercury or Chromium compounds



PU WHITE GLOSS ITALIAN WOOD FINISHES

Wood Amore PU White Gloss is a high quality polyurethane which offers good hiding and whiteness with excellent gloss levels

PRODUCT BENEFITS/FEATURES



Excellent covering power



Good verticality and filling



Surface hardness and flowing



Excellent whiteness




Interior

AREAS OF APPLICATION

• Wood • MDF • PLYWOOD • Other wooden surfaces

PACKAGING AVAILABLE

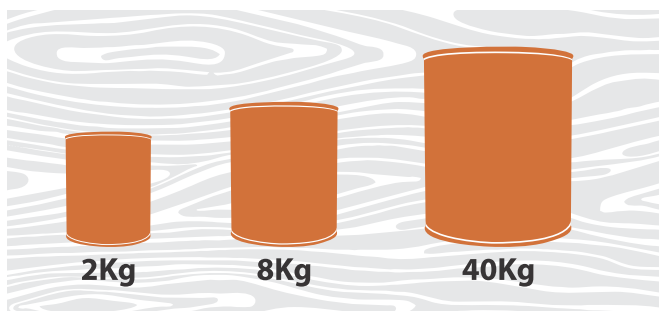

COVERAGE

On normal masonry surface by brushing




*Actual Coverage may vary from the quoted coverage due to factors such as method and condition of application, surface roughness and porosity.

FINISH

✓ SMOOTH

✓ GLOSS

COLOURS AVAILABLE

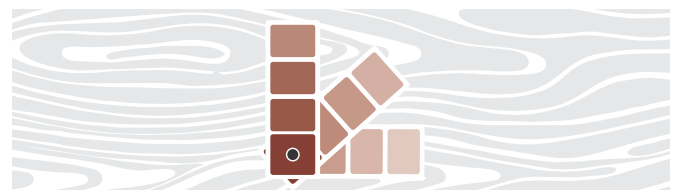

Range of 2000 RAL & NCS Shade for interiors available to add/change colours

HOW TO APPLY

SANDING: Sand the wooden surface along the grains using sand paper no. 180, and then 320 or 400. Wipe surface to clean off loose dust particles.

INSULATING: Apply 1-2 coats of Wood Amore PU Insulator to insulate from oil & resin from the wood, also it reduces absorption of a paint material on Plywood & MDF.

DENT FILLING: If the surface has dents, apply Dent Filler with a putty knife over the dented area.

APPLICATION:

STEP 1: Apply first coat of Wood Amore PU White Filler

STEP 2: SANDING: Sand with sand paper no. 320 or 400 and wipe clean (After drying)

STEP 3: Apply second coat of Wood Amore PU White Filler

STEP 4: Sand with sand paper no. 320 or 400 and wipe clean (Apply third coat if required before top coat application, sand with sand paper no. 320/400 and wipe clean)

STEP 5: Apply first coat of Wood Amore PU White Gloss / light shade

STEP 6: SANDING: Sand the surface with emery paper 320 or 400 and wipe clean

STEP 7: Apply second coat of Wood Amore PU white gloss / light shade

POST PAINTING CARE

"For removing stains on tiles and metal surfaces, apply NC Thinner on the surface and wipe clean. If stains are difficult to remove, scrapping can be done after applying NC thinner on the stained area. Precautions need to be taken while spraying / brushing, like masking of adjoining areas with suitable material, as the stains may be difficult to remove if present on wood or coated wooden and wall surfaces."

TECHNICAL DETAILS

a. Drying time: Surface dry time 50 min.

b. Flash point IS101/1987 Part 1, Sec 6: > 30°C (> 85° F)

c. Stability of thinned paint: To be used within 3-4 hours

Mixing ratio- 1:1 by weight (Resin + Hardener)

Thinner- Wood Amore PU Glossy thinner.

Thinner Intake- 30- 35% by Volume.

Number of coats- 2- 3 coats

Dust free time- 40-50 min

Handling time- 3.5- 4 Hr.

Gun Nozzle- 1.4-1.6mm

Gun pressure- 2.2- 2.8 kgs/sq.cm

Weather- 30°C and 75% relative humidity

PRECAUTIONS

For optimum performance of Wood Amore PU White Gloss

1. WoodAmore PU top coats must be applied at a temperature between 20°C and 40°C and humidity not above 75%.
2. Do not over-thin and mix according to recommended ratios
3. Stir well and strain before use.

SAFETY FEATURES

- Kindly refer to the MSDS of Wood Amore PU White Filler, Gloss and Matt which gives detailed information on safety measures while handling the paint.
- Store the product at ambient conditions in well ventilated locations and away from source of ignition and fire.
- Use protective equipment like rubber/polyurethane gloves, safety goggles/glasses, face mask while handling the paint.
- Avoid eye and skin contact. In both cases wash with soap and plenty of water. Get medical attention if irritation develops or persists.
- Do not inhale or ingest. In case of inhalation move to fresh air and seek medical attention if symptoms persist in both cases.
- Dispose in land filling. Do not dispose in any drain or landfill.
- No added Lead, Mercury or Chromium compounds



PU INSULATOR ITALIAN WOOD FINISHES

Wood Amore PU Insulator provides a strong protecting film to the wood by penetrating inside it and sealing the porosity of the wooden surface. It helps to enhance the actual color of the wood and can be used for interior surfaces

PRODUCT BENEFITS/FEATURES



Excellent Insulating properties



Fast Drying




Interior

AREAS OF APPLICATION

• Plywood • MDF and Veneer

PACKAGING AVAILABLE

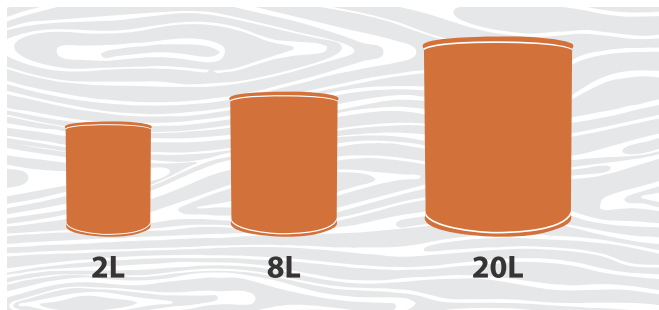


2L

8L

20L

COVERAGE

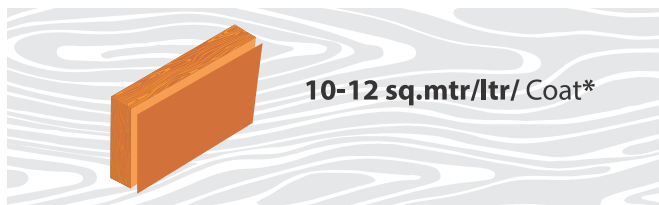

10-12 sq.mtr/ltr/ Coat*

*Actual coverage may vary from the quoted coverage due to factors such as method and conditions of application, surface roughness and porosity.

FINISH

✓ SMOOTH

HOW TO APPLY

STEP 1: Apply first coat of Wood Amore PU Insulator

STEP 2: Leave the surface to dry

STEP 3: Apply second coat of Wood Amore PU Insulator

STEP 4: Apply Wood Amore PU Clear/ White Filler (Clear/White)

POST PAINTING CARE

For removing stains on tiles and metal surfaces, apply NC Thinner on the surface and wipe clean. If stains are difficult to remove, scrapping can be done after applying NC thinner on the stained area. Precautions need to be taken while spraying / brushing, like masking of adjoining areas with suitable material, as the stains may be difficult to remove if present on wood or coated wooden and wall surfaces.

TECHNICAL DETAILS

- a. **Drying time: 8-10min.**
- b. **Flash point IS101/1987 Part 1, Sec 6: 9C (15.8 F)**
- c. **Stability of thinned paint: To be used within 3-4 hours**

Mixing ratio- 1:1 by Vol (Resin + Hardener)

Thinner- NA

Thinner Intake- NA

Number of coats- 1-2 coats

Dust free time- 4 - 5 min

Handling time- 30- 35min.

Gun Nozzle- 1.4-1.6mm

Gun pressure- 2.2- 2.8 kgs/sq.cm

Weather- 30°C and 75% relative humidity

PRECAUTIONS

For optimum performance of Wood Amore PU Insulator

1. WoodAmore PU top coats must be applied at a temperature between 20°C and 40°C and humidity not above 75%.
2. Do not over-thin and mix according to recommended ratios
3. Stir well and strain before use.

SAFETY FEATURES

- Kindly refer to the MSDS of Wood Amore PU Insulator which gives detailed information on safety measures while handling the paint.
- Store the product at ambient conditions in well ventilated locations and away from source of ignition and fire.
- Use protective equipment like rubber/polyurethane gloves, safety goggles/glasses, face mask while handling the paint.
- Avoid eye and skin contact. In both cases wash with soap and plenty of water. Get medical attention if irritation develops or persists.
- Do not inhale or ingest. In case of inhalation move to fresh air and seek medical attention if symptoms persist in both cases.
- Dispose in land filling. Do not dispose in any drain or landfill.
- No added Lead, Mercury or Chromium compounds