



PU WHITE FILLER

PREMIUM WOOD FINISHES

Wood Amore PU White Filler is a PU-based white coating, which offers excellent filling properties on wooden surfaces.

PRODUCT BENEFITS/FEATURES



Smooth finish



Superior coverage



Easy sanding



Fast drying




Suitable for interior surfaces

AREAS OF APPLICATION

• Various natural wood • MDF • HDF • Plywood

PACKAGING AVAILABLE

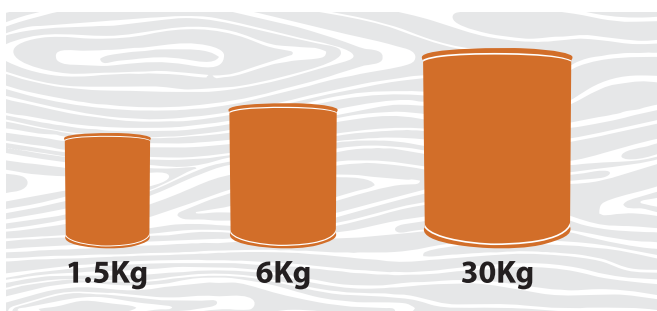


COVERAGE



Actual coverage may vary from the quoted coverage due to factors such as method and condition of application, surface roughness and porosity.

COLOURS AVAILABLE

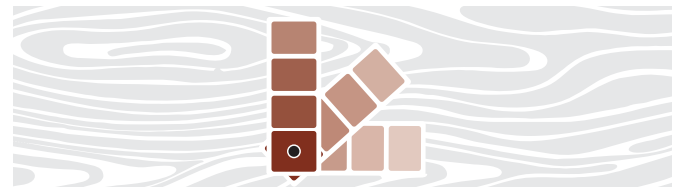

Range of 2000 RAL & NCS shades for interiors available to add/change colours

HOW TO APPLY

Pre-painting steps



SANDING: Sand the wooden surface along the grains using sandpaper no. 180, and then 320 or 400. Wipe surface to clean off loose dust particles.



INSULATING: Apply 1-2 coats of Wood Amore Insulator to insulate the wood from oil & resin. It also reduces the absorption of a paint material on Plywood & MDF.



DENT FILLING: If the surface has dents, apply Dent Filler with a putty knife over the dented area.

APPLICATION



STEP 1: Apply the first coat of Wood Amore PU White Filler.



STEP 2: SANDING: Sand with sandpaper No. 320 or 400 and wipe clean (after drying).



STEP 3: Apply the second coat of Wood Amore PU White Filler.



STEP 4: Sand with sandpaper No. 320 or 400 and wipe clean (Apply a third coat if required before top coat application, sand with sandpaper no. 320 or 400, and wipe clean.)



STEP 5: Apply the first coat of Wood Amore PU White Matt 20%/White High Gloss.



STEP 6: Sanding: Sand the surface with emery paper 320 or 400 and wipe clean.



STEP 7: Apply the second coat of Wood Amore PU White Matt 20%/White High Gloss.

POST PAINTING CARE

For removing stains on tiles and metal surfaces, apply NC Thinner to the surface and wipe clean. If stains are difficult to remove, scraping can be done after applying NC thinner to the stained area. Precautions need to be taken while spraying or brushing, like masking adjoining areas with suitable material, as the stains may be difficult to remove if present on wood or coated wooden and wall surfaces.

PRODUCT INFORMATION

Mixing ratio- 2:1 by weight (Resin + Hardener)

Thinner- Wood Amore PU Medium thinner

Thinner Intake- 30- 35% by Volume

Number of coats- 2- 3 coats

Dust free time- 40-50 min

Handling time- 3.5- 4 Hr.

Gun Nozzle- 1.6-1.8mm

Gun pressure- 2.2- 2.8 kgs/sq.cm

Weather- 30°C and 75% relative humidity

PRECAUTIONS

For optimum performance, use Wood Amore PU White Filler in the following ways:

1. Wood Amore PU top coats must be applied at a temperature between 20°C and 40°C and humidity not above 75%.
2. Do not over-thin and mix according to recommended ratios.
3. Stir well and strain before use.

SAFETY FEATURES

- Store the product at ambient conditions in well ventilated locations and away from source of ignition and fire.
- Use protective equipment like rubber/polyurethane gloves, safety goggles/glasses, face mask while handling the paint.
- Avoid eye and skin contact. In both cases wash with soap and plenty of water. Get medical attention if irritation develops or persists.
- Do not inhale or ingest. In case of inhalation move to fresh air and seek medical attention if symptoms persist in both cases.
- Dispose in land filling. Do not dispose in any drain or landfill.
- No added Lead, Mercury or Chromium compounds.