



PU WHITE HIGH GLOSS PREMIUM WOOD FINISHES

Wood Amore PU White High Gloss offers an exceptional finish for wooden surfaces with excellent gloss retention.

PRODUCT BENEFITS/FEATURES



Superior gloss



Excellent finish



Excellent smoothness



Excellent hardness



Long lasting




Excellent whiteness


AREAS OF APPLICATION

• Wood • MDF • PLYWOOD • Other wooden surfaces

PACKAGING AVAILABLE

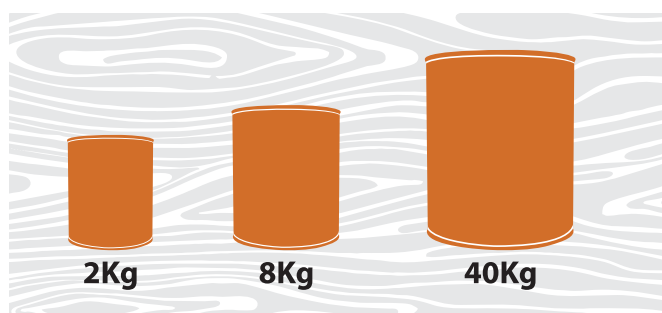

COLOURS AVAILABLE

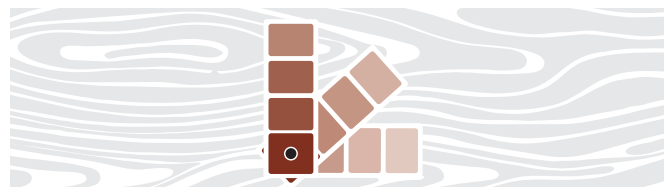

Range of 2000 RAL & NCS shades for interiors available to add/change colours.

FINISH

✓ SMOOTH

✓ GLOSSY

COVERAGE

On normal masonry surface by brushing



8-9 m²/kg per coat
at recommended dft.

*Actual Coverage may vary from the quoted coverage due to factors such as method and condition of application, surface roughness and porosity.

HOW TO APPLY



SANDING: Sand the wooden surface along the grains using sand paper no. 180, and then 320 or 400. Wipe the surface to clean off loose dust particles.



INSULATING: Apply 1-2 coats of Wood Amore Insulator to insulate the wood from oil & resin. It also reduces the absorption of a paint material on Plywood & MDF.



DENT FILLING: If the surface has dents, apply Dent Filler with a putty knife over the dented area.

APPLICATION



STEP 1: Apply the first coat of Wood Amore PU White Filler.



STEP 2: SANDING: sand with sandpaper no. 320 or 400 and wipe clean (after drying).



STEP 3: Apply the second coat of Wood Amore PU White Filler.



STEP 4: Sand with sandpaper no. 320 or 400 and wipe clean (apply third coat if required before top coat application, sand with sand paper no. 320/400 and wipe clean).



STEP 5: Apply the first coat of Wood Amore PU White High Gloss/light shade.



STEP 6: SANDING: sand the surface with emery paper 320 or 400 and wipe clean.



STEP 7: Apply the second coat of Wood Amore PU White High Gloss/light shade.

POST PAINTING CARE

For removing stains on tiles and metal surfaces, apply NC Thinner to the surface and wipe clean. If stains are difficult to remove, scraping can be done after applying NC thinner to the stained area. Precautions need to be taken while spraying or brushing, like masking adjoining areas with suitable material, as the stains may be difficult to remove if present on wood or coated wooden and wall surfaces.

PRODUCT INFORMATION

Mixing ratio- 1:1 by weight (Resin + Hardener)

Thinner- Wood Amore PU Glossy thinner

Thinner Intake- 30- 35% by Volume

Number of coats- 2- 3 coats

Dust free time- 40-50 min

Handling time- 3.5- 4 Hr.

Gun Nozzle- 1.4-1.6mm

Gun pressure- 2.2- 2.8 kgs/sq.cm

Weather- 30°C and 75% relative humidity

PRECAUTIONS

For optimum performance, use Wood Amore PU White High Gloss in the following ways:

1. Wood Amore PU topcoats must be applied at a temperature between 20°C and 40°C and humidity not above 75%.
2. Do not over-thin and mix according to recommended ratios.
3. Stir well and strain before use.

SAFETY FEATURES

- Store the product at ambient conditions in well ventilated locations and away from source of ignition and fire.
- Use protective equipment like rubber/polyurethane gloves, safety goggles/glasses, face mask while handling the paint.
- Avoid eye and skin contact. In both cases wash with soap and plenty of water. Get medical attention if irritation develops or persists.
- Do not inhale or ingest. In case of inhalation move to fresh air and seek medical attention if symptoms persist in both cases.
- Dispose in land filling. Do not dispose in any drain or landfill.
- No added Lead, Mercury or Chromium compounds.